









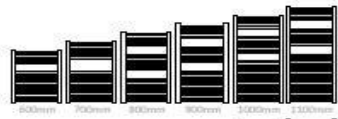

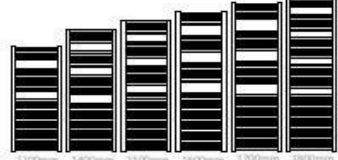










SANICA


RADYATÖR

This product must be fitted only by a fully qualified installer.

DISCRIPTION	TOOLS NECESSARY
  Towel Rail x1	Fixing choose the appropriate fixing for the wall material if required 
	PTFE tape 
	Electric drill 
	Masonry drill bit appropriate to the fixings 
	Adjustable spanner 
	Radiator valve hex key 
	Flat head and philips head screw drivers 
	1 lock shield valve and 1 gate or thermostatic valve 
	Spirit level 
	Measuring tape 
 Brackets x4  Wall Anchors x4  Fixing Screws x4  Washers x4  Security Screws x4  End Plug x1  Air Vent x1	

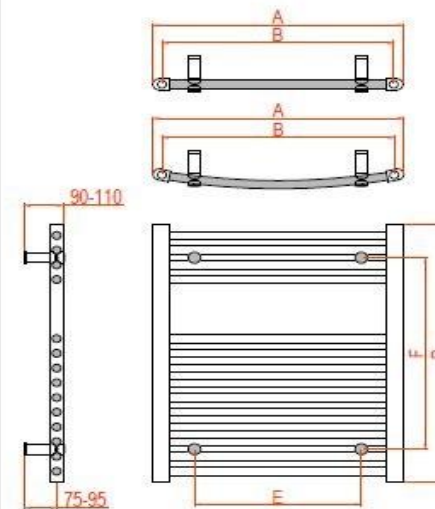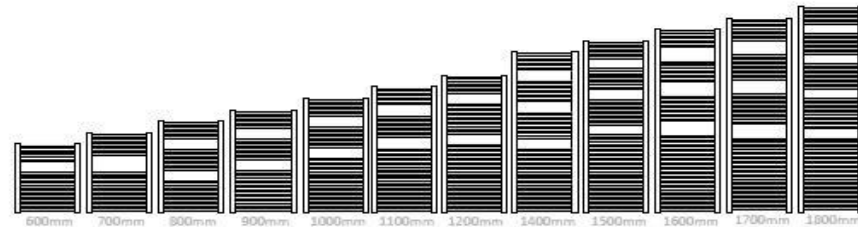

WIDTH A	AXIS B	Horizontal Hole E
300	255	100
400	355	200
450	405	250
500	455	300
550	505	350
600	555	400
700	655	500
750	705	550
800	705	600

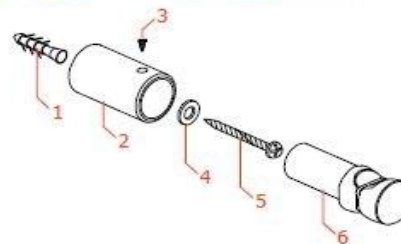

HEIGHT D	Vertical Hole F
600	420
700	528
800	628
900	720
1000	828
1100	928
1200	1028
1400	1228
1500	1328
1600	1428
1700	1514
1800	1614

Maximum working pressure
Maximum working temperature

4 Bar
95°C

INSTRUCTIONS

The radiator should not be mounted closer than 50mm below any overhanging surface (i.e. shelf) and no lower than 100mm from the floor. Transfer the bracket drill position measurements to the wall.

Drill the wall and insert wall anchors (1) (or other suitable fixings).

Put the brackets (2) on the wall and screw them to the wall anchors (1) with fixing screws (5) and washers (4).

Screw the brackets (6) onto the radiator.

Insert brackets (6) into the brackets (2) and tighten the security screws (3).

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical again st during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.